

SANSUI

551

MODEL

SERVICE MANUAL

1. SPECIFICATIONS

AUDIO SECTION

CONTINUOUS RMS POWER OUTPUT

.....16 Watts per channel × 2
(both channels driven)

LOAD IMPEDANCE 8Ω

POWER BAND 20 to 20,000Hz

TOTAL HARMONIC DISTORTION

.....less than 0.8% (from AUX)

Music power (IHF) 70W (4Ω 1,000Hz)
50W (8Ω 1,000Hz)

Continuous rms power output ..17+17W (8Ω 1,000Hz)

INTERMODULATION DISTORTION

(at rated power output, 70Hz : 7,000Hz = 4 : 1
SMPTE method)

OVERALL (from AUX) less than 0.8%

FREQUENCY RESPONSE (at 1 Watt power output)

OVERALL (from AUX) 15 to 30,000Hz ± 1.0 dB
 ± 2.0 dB

EQUALIZATION (at TAPE REC output)

.....RIAA Curve
(30 to 15,000Hz ± 1.5 dB)

DAMPING FACTOR 20 (8Ω)

CHANNEL SEPARATION (1,000Hz, at rated power output)

PHONO better than 45dB

AUX better than 45dB

HUM AND NOISE (IHF)

PHONO better than 70dB

AUX better than 80dB

INPUT SENSITIVITY AND IMPEDANCE

(1,000Hz, for rated power output)

PHONO 2.5mV 50kΩ

(Max. input capability: 90mV at 0.5% distortion)

AUX 150mV 50kΩ

TAPE

PLAY Pin Jacks 150mV 50kΩ

REC/PLAY DIN Socket ..150mV 50kΩ

RECORDING OUTPUT

TAPE

REC Pin Jacks 150mV

REC/PLAY DIN Socket ..30mV

SWITCHES AND CONTROLS

BASS+10dB, -10dB at 50Hz

TREBLE+10dB, -10dB at 10,000Hz

LOUDNESS+10dB at 50Hz

+8dB at 10,000Hz

HIGH FILTER-10dB at 10,000Hz

(6dB/oct)

TUNER SECTION

<FM>

TUNING RANGE 88 to 108MHz

SENSITIVITY (IHF) 2.5μV

TOTAL HARMONIC DISTORTION

MONO 0.4%

STEREO 0.7%

SIGNAL TO NOISE RATIO ..better than 65dB

SELECTIVITY better than 60dB

CAPTURE RATIO 2.5dB

IMAGE REJECTION better than 55dB at 98MHz

IF REJECTION better than 75dB at 98MHz

SPURIOUS RESPONSE REJECTION

.....better than 65dB at 98MHz

SPURIOUS RADIATION less than 34dB

STEREO SEPARATION better than 40dB at 1kHz

FREQUENCY RESPONSE 30 to 15,000Hz

ANTENNA INPUT IMPEDANCE

.....300Ω balanced,
75Ω unbalanced

<AM>

TUNING RANGE 535 to 1,605kHz

SENSITIVITY (Bar Antenna) ..53dB/m at 1MHz

SELECTIVITY better than 30dB at 1MHz

IMAGE FREQUENCY REJECTION

.....better than 80dB/m at 1MHz

IF REJECTION better than 80dB/m at
1MHz

OTHERS

SEMICONDUCTORS

TRANSISTORS 30

DIODES 10

FET 1

ICs 5

ZENER DIODE 1

Light Emitted Diode (LED) 1

POWER REQUIREMENTS

VOLTAGE 100, 117, 220, 240V 50/60Hz

CONSUMPTION 60W (rated), 140W (max.)

DIMENSIONS 424mm (16 $\frac{3}{4}$ " W,

135mm (5 $\frac{3}{8}$ " H,




285mm (11 $\frac{1}{4}$ " D

WEIGHT 7.7kg (17.0 lbs.) net

10.1kg (22.3 lbs.) Packed

* Design and specifications subject to change without notice for improvements.

2. BLOCK DIAGRAM AND VALUE OF EACH LEVEL

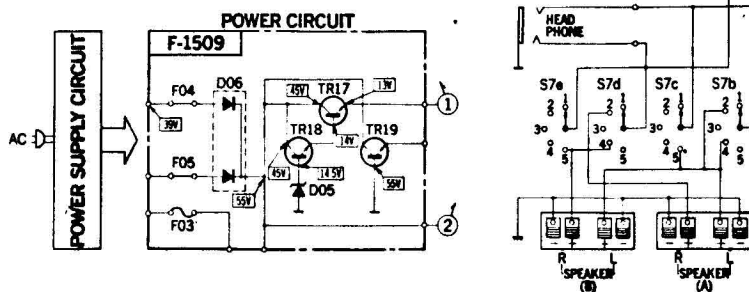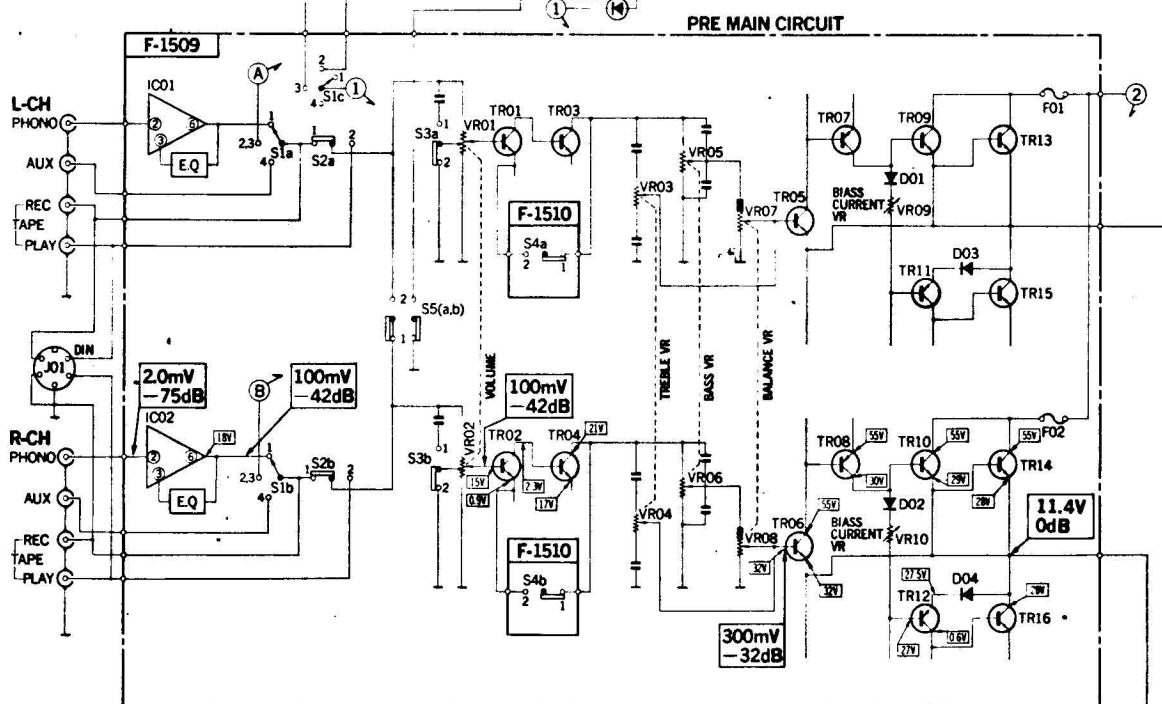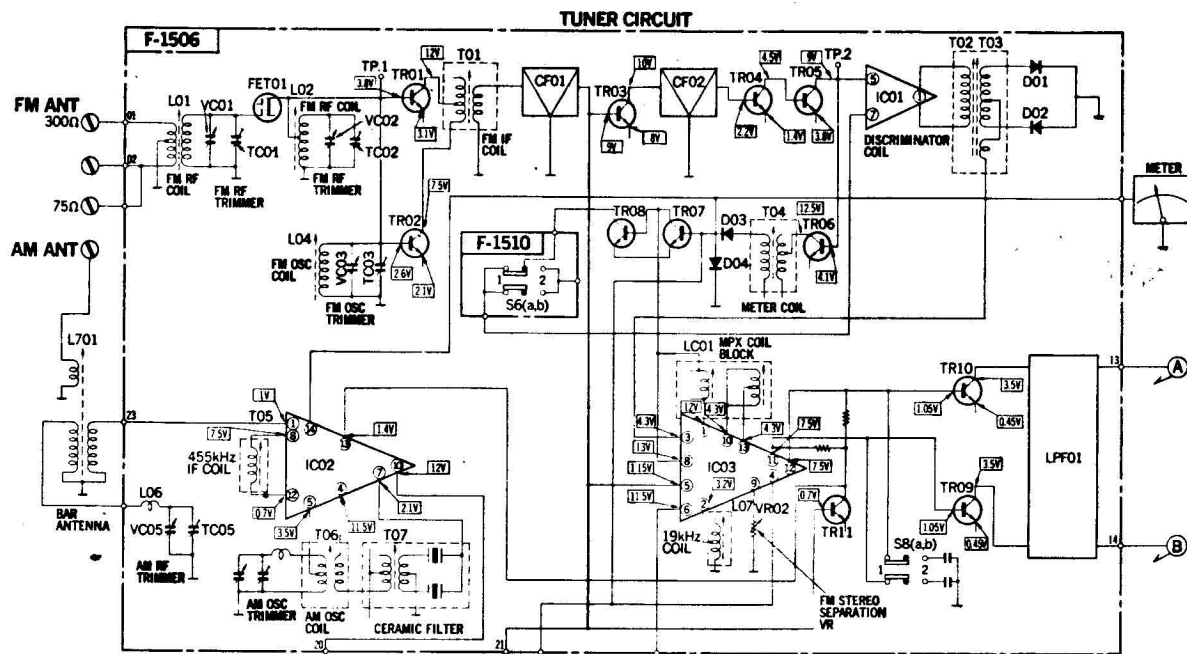

- | | |
|------------------------|-----------------------------|
| S1(a-c): SELECTOR | S5(a, b): MODE |
| 1. PHONO | 1. STEREO |
| 2. FM AUTO | 2. MONO |
| 3. AM | S6(a, b): FM MUTING |
| 4. AUX | 1. OFF |
| S2(a, b): TAPE MONITOR | 2. ON |
| 1. OFF | S7(a-e): POWER, SPEAKERS |
| 2. ON | 1. POWER OFF |
| S3(a, b): LOUDNESS | 2. SPEAKER(A) |
| 1. ON | 3. SPEAKER OFF (HEAD PHONE) |
| 2. OFF | 4. SPEAKER(B) |
| S4(a, b): HIGH FILTER | 5. SPEAKER(A+B) |
| 1. OFF | S8(a, b): FM DE-EMPHASIS |
| 2. ON | 1. 50 μ S |
| | 2. 75 μ S |

3. THREADING OF DIAL CORD

If a dial cord is cut off or slips, replace it by following procedures. As 551 uses 0.6mm ϕ cord, please replace it with the same type certainly.

*The length of dial cord is approximately 170cm (66 inch).

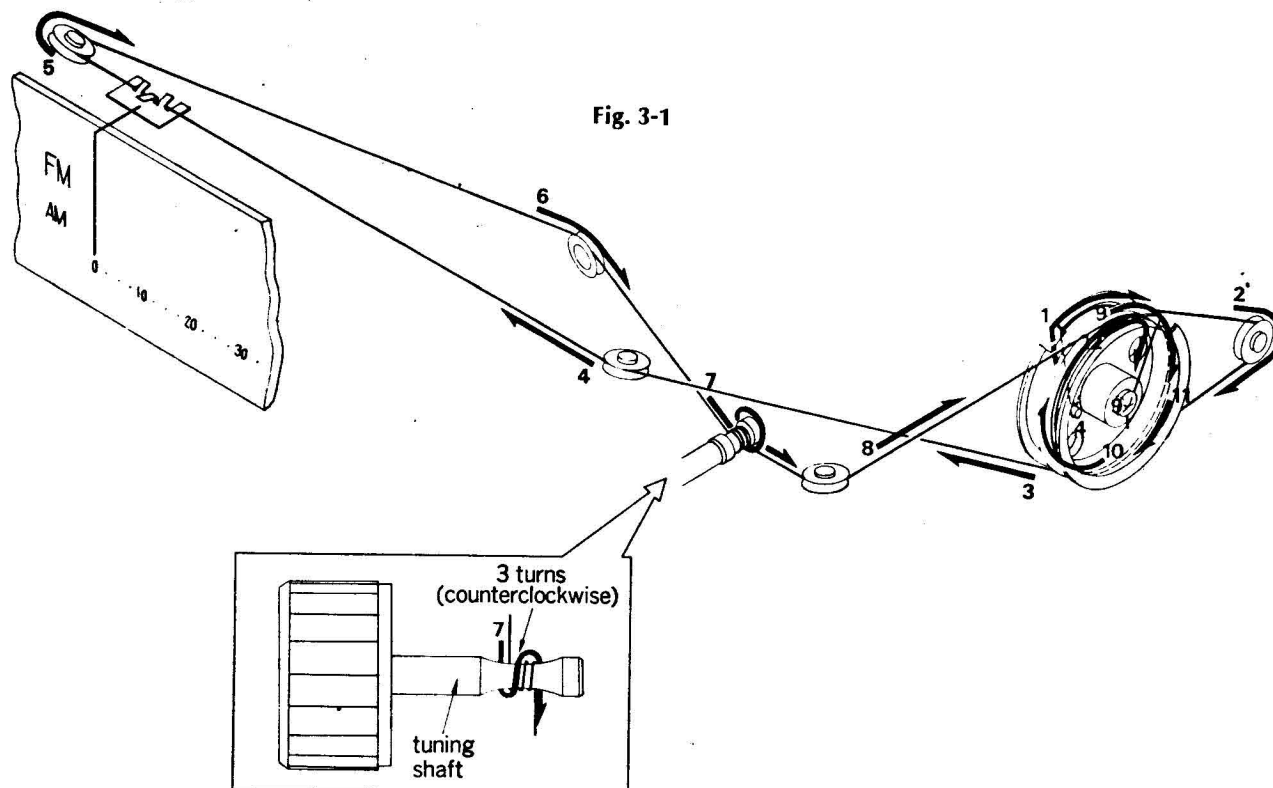


Fig. 3-1

3-1. Threading of Dial Cord

Thread dial cord in numerical order from 1 to 12 as shown in Fig. 3-1.

- 1) Close the variable capacitor completely (Max. capacitance) and tie cord to number ④ screw of the dial pulley.
- 2) Thread cord in the direction of arrow from 1 to 6, then wind cord three turns around the tuning shaft counterclockwise.
- 3) Thread cord in the direction of arrow from 7 to 8, then wind it two turns on the dial pulley from 9 to 12.
- 4) After 12, tie cord to number ⑩ screw of the dial pulley.

*When you perform procedure (4) successfully, please refer to the followings.

- ① To strengthen the dial cord tension, hold around the end of cord and pull it toward the Front Panel.

② Then, turn tuning shaft counterclockwise, as the cord tension will be more constantly obtained.

③ Tie the cord to number ⑩ screw of the dial pulley (Same as procedure 4).

5) After procedures, lock the knots of cord with paint.

Stock No.	Description
6036050	Dial Cord (0.6mm ϕ)

3-2. Attachment of Dial Pointer

- 1) Close the variable capacitor completely.
- 2) Set the dial pointer to "0" on dial scale and install the dial pointer ass'y.

*Confirm that the dial pointer runs smoothly on the dial scale by turning the tuning shaft.

Conditions of Level Measuring

*Value of each level in block diagram was measured by the followings.

1. MASTER VOLUME control.....Maximum
2. BASS, TREBLE, BALANCE volume control Center
3. Input PHONO 2.0mV 1kHz Sine Wave
AUX 100mV 1kHz Sine Wave

(Output impedance of 600 Ω at an audio oscillator)

4. Output 11.4V (16W) 8 Ω

Note: Each voltage value is for reference and measured by a VTVM. In some recorder, the actual voltage value is in minor difference from the reference value.

4. ALIGNMENTS AND ADJUSTMENTS

Abbreviation

Equipment

AM FM Generator Oscilloscope Genescope
 AM Standard Signal Generator AM SSG
 FM Standard Signal Generator FM SSG
 FM Stereo Generator Stereo SG
 Oscilloscope Scope
 Audio Oscillator Audio Osc
 Distortion Meter Dist. Meter

Others


Clockwise CW.
 Counterclockwise CCW.
 Antenna ANT.
 Modulation MOD.

4-1. Driver Circuit Board Adjustment (See Fig. 4-1)

- Note:** 1. Master Volume Minimum
 2. Make the SP terminals free (no load).
 3. After adjustment, run the unit for more than 5 minutes, then check and readjust necessary.
 4. Room temperature should be 18~28° (65~83°F) for bias current adjustment.

STEP	SUBJECT	EQUIPMENT	MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
1	Bias current L-ch	DC milliammeter	F-1509 F01 (Fig. 4-1)	F-1509 VR09 (Fig. 4-1)	20±1mA	◦ Step down meter's range accordingly
2	Bias current R-ch	DC milliammeter	F-1509 F02 (Fig. 4-1)	F-1509 VR10 (Fig. 4-1)	20±1mA	◦ Change lead's polarity if meter swings backward



Fig. 4-1

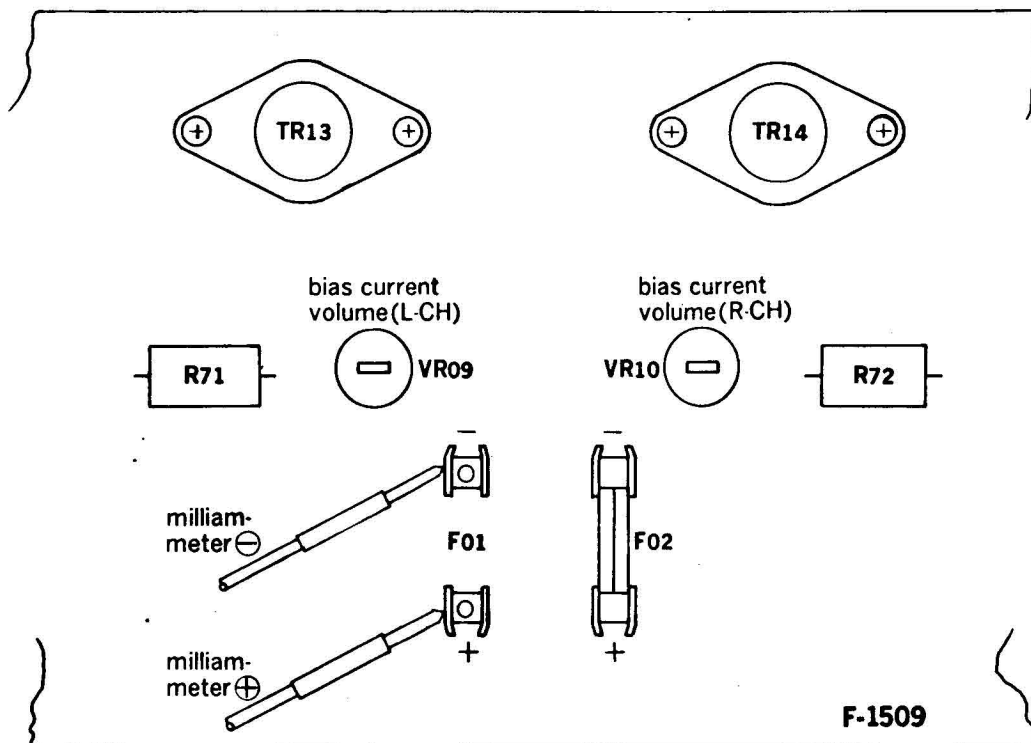

4-2. FM IF Alignment (See Figs. 4-5 and 4-6 on page 8)

- Note: 1. Selector.....FM AUTO
 2. Master Volume Minimum
 3. Output level of genescope ..After attenuator
 4. Sweepwidth.....1.5~2cm/150kHz
 5. Frequency band 9.5~11.5 MHz

6. Connection Connect the output of genescope to TP. 1 through 100pF ceramic capacitor.
 7. FM Muting Switch OFF (Push in)

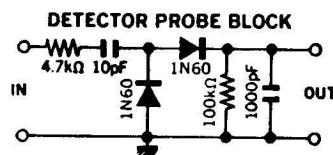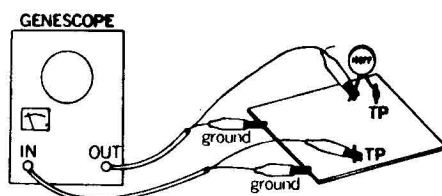




STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR
		FROM	TO			
1	IF Coil	Output 65dB Genescope	TP. 2 (Fig. 4-6)	TP. 2 (Fig. 4-6) Use Detector Probe	T01 (Fig. 4-6)	Max. IF waveform 1 as Fig. 4-5
2	Discriminator Coil	Output 70dB Genescope	TP. 1 (Fig. 4-6)	TP. 3 (Fig. 4-6) Direct from Genescope	T02 (Fig. 4-6) T03 (Fig. 4-6)	Max. linearity of S curve Set the center of S curve to of waveform 1 as Fig. 4-5.
3	Meter Coil	Output 70dB Genescope	TP. 1 (Fig. 4-6)	TP. 4 (Fig. 4-6) Direct from Genescope	T04 (Fig. 4-6)	Max. IF waveform 2 Set the center of waveform 2 to of waveform 1 as Fig. 4-5

4-3. FM Dial Calibration, MONO Distortion and RF Alignment

- Note: 1. Selector.....FM AUTO
 2. Master Volume Minimum
 3. Confirm start point of dial pointer before alignment.
 4. FM Muting switch OFF (Push in)

(See Fig. 4-6 on page 8)

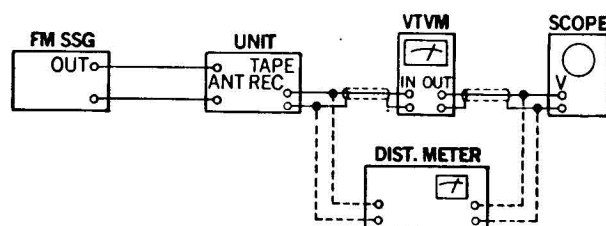


STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1	90MHz Dial Calibration	90MHz ANT input 60dB 400Hz (100% MOD) FM SSG	FM ANT terminal 300Ω	REC OUT L or R-ch VTVM & Scope	L04 (Fig. 4-6)	Max. Output	• Set Dial or 90MHz 
2	106MHz Dial Calibration	106MHz ANT input 60dB 400Hz (100% MOD) FM SSG	Same as above	Same as above	TC03 (Fig. 4-6)	Max. Output	• Set Dial or 106MHz 
3	Confirm 90MHz Dial Calibration	Same as Step 2	Same as above	Same as above		Confirm 90MHz Dial Calibration	• If not, repeat from Step 1

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
4	Confirm 106MHz Dial Calibration	Same as Step 2	Same as Step 1	Same as Step 1		Confirm 106MHz Dial Calibration	• If not, repeat from Step 2
5	90MHz RF Adj.	90MHz ANT input 50dB 400Hz (100% MOD) FM SSG	Same as above	Same as above	L01 L02 (Fig. 4-6)	Max. Output	• Tune FM SSG (Max. indication of Signal Meter)
6	106MHz RF Adj.	106MHz ANT input 50dB 400Hz (100% MOD) FM SSG	Same as above	Same as above	TC01 TC02 (Fig. 4-6)	Max. Output	Same as above
7	Distortion	98MHz ANT input 60dB 400Hz (100% MOD) FM SSG	Same as above	REC OUT L or R-ch Dist. meter & Scope	T03 (Fig. 4-6)	Min. Distortion	• Turn core T02 Max. output

4-4. MPX Alignment (See Fig. 4-6 on page 8)

- Note: 1. Selector.....FM AUTO
2. Master Volume Minimum
3. FM Muting switch OFF (Push in)

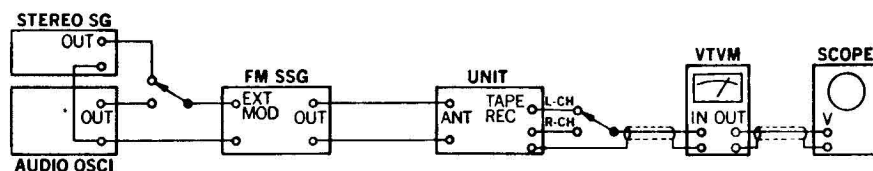

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1	19KHz Coil	98MHz ANT input 60dB FM SSG Pilot 19KHz (10% MOD) L-CH 1KHz (45% MOD) R-CH (0% MOD) Stereo SG	FM ANT terminal 300Ω	REC OUT L-ch VTVM & Scope	L07 (Fig. 4-6)	Max. Output	
2	Separation	Same as above	Same as above	REC OUT R-ch VTVM & Scope	VR02 (Fig. 4-6)	Min. Output	
3	Confirm Separation	98MHz ANT input 60dB FM SSG Pilot 19KHz (10% MOD) L-CH (0% MOD) R-CH 1KHz (45% MOD) Stereo SG	Same as above	REC OUT L-ch VTVM & Scope		Min. Output	• If less than 40dB, adjust VR02

4-5. AM IF, Dial Calibration, RF Alignment (See Figs. 4-3, 4-4 and 4-6 on page 8)

- Note: 1. Selector.....AM
2. Master Volume Minimum
3. Confrm start point of dial pointer before alignment.
4. In case of using loop antenna, increase output of AM SSG for 26dB than bar antenna's direct input as it attenuates input sensitivity for 26dB (See Fig. 4-2)

Fig. 4-2

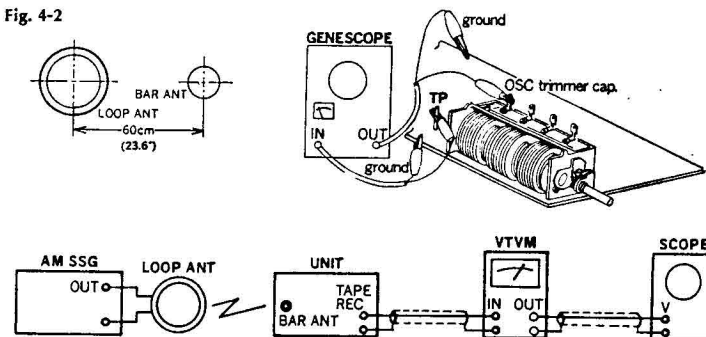


Fig. 4-3

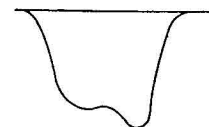


Fig. 4-4

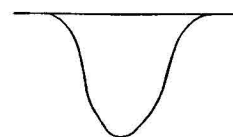


Fig. 4-5



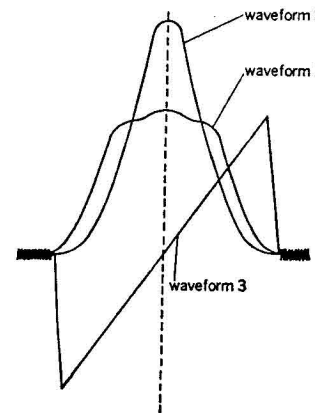


Fig. 4-6

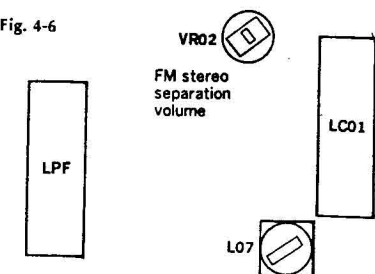

F-1506

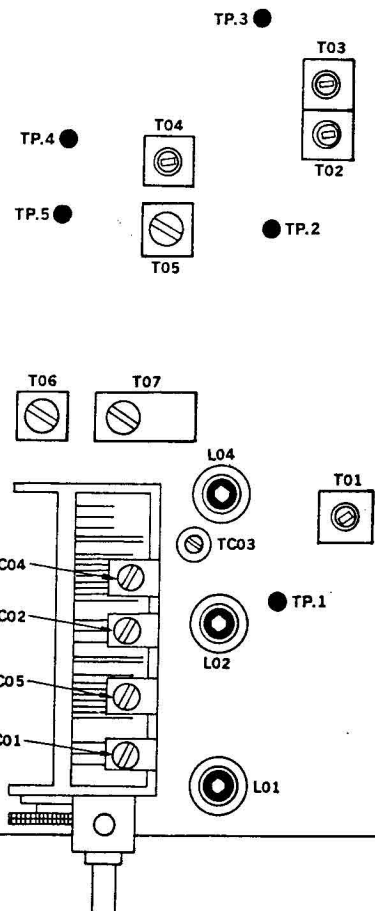

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1	IF coil	Output 70dB Genescope	OSC Trimmer Cap. TC04 (Fig. 4-6)	TP. 5 (Fig. 4-6)	T07 (Fig. 4-6)	Max. IF wave-form as Fig. 4-3	
2	IF coil	Output 60dB Genescope	Same as above	Same as above	T05 (Fig. 4-6)	Max. IF wave-form as Fig. 4-4	
3	Confirm IF coil	Same as above	Same as above	Same as above		Max. IF wave-form as Fig. 4-3, 4-4	• If not, repeat from Step 1 & 2
4	535KHz Dial Calibration	535KHz ANT input 86dB 1KHz (30% MOD) AM SSG Use loop ant.	Bar ant.	REC OUT L or R-ch VTVM & Scope	T06 (Fig. 4-6)	Max. Output	• If broadcasting station is near, it might be used
5	1400KHz Dial Calibration	1400KHz ANT input 86dB 1KHz (30% MOD) AM SSG Use loop ant.	Bar ant.	Same as above	TC04 (Fig. 4-6)	Max. Output	• Same as above
6	Confirm 535KHz Dial Calibration	Same as Step 4	Same as above	Same as above		Max. Output	• If not, repeat from Step 4
7	Confirm 1000KHz Dial Calibration	1000KHz ANT input 86dB 1KHz (30% MOD) AM SSG Use loop ant.	Bar ant.	REC OUT L or R-ch VTVM & Scope		Max. Output	
8	Confirm 1400KHz Dial Calibration	Same as Step 5	Same as above	Same as above		Max. Output	• If not, repeat from Step 5
9	600KHz RF Adj.	600KHz ANT input 76dB 1KHz (30% MOD) AM SSG Use loop ant.	Same as above	Same as above	Bar ant. L701	Max. Output	
10	1400KHz RF Adj.	1400KHz ANT input 76dB 1KHz (30% MOD) AM SSG Use loop ant.	Same as above	Same as above	TC05 (Fig. 4-6)	Max. Output	

5. TROUBLESHOOTING CHART

5-1. Troubleshooting on Power Supply Section

Symptom	Check Point	Cause & What to Do
1. No power supplied to each section		
1-1. Each lamp not lighted		1. Imperfect contact of power supply plug 2. Defective power switch, S11 3. Power fuse F701 opens 4. F03 on F-1509 opens 5. Defective power transformer, PT01 6. Imperfect contact of voltage selector, PU01
1-2. Each lamp lighted		
1) +52V not supplied to collector of TR13 (TR14) on F-1509		7. Quick acting fuse, F01 (F02) on F-1509 opens 8. F04, (F05) fuse on F-1509 opens 9. Defective D06 on F-1509
2) +12V not supplied emitter of TR17 on F-1509		10. Defective TR17 on F-1509 11. Defective TR18 on F-1509 12. Defective D05 on F-1509
3) +40V not supplied emitter of TR19 on F-1509		13. Defective TR19 on F-1509

5-2. Troubleshooting on Audio Section

1. Quick acting fuse opens

1-1. After replacement, the fuse opens again	14. Defective TR13 or TR15 (TR14 or TR16) on F-1509 15. Defective TR09 or TR11 (TR10 or TR12) on F-1509 16. Defective D01 (D02) on F-1509 17. Defective VOLUME VR09 (VR10) on F-1509
1-2. After replacement, fuse opens	
1) DC bias current adjustable	18. Set the bias current to +20mA by VR09 (VR10) on F-1509 (See Page 5)
2) DC bias current not adjustable	19. Defective VR09 (VR10), TR07 (TR08) on F-1509

2. AUX inoperative

2-1. Both channels inoperative	20. Defective power supply circuit section
2-2. One channel inoperative	21. Defective TR07 (TR08) on F-1509 22. Defective TR05 (TR06) on F-1509 23. Defective TR01, TR03 (TR02, TR04) on F-1509 24. Imperfect contact of accessory switch and volume 25. Imperfect contact of input terminal section

3. PHONO inoperative

3-1. Both channels inoperative	26. Defective power supply circuit section
--------------------------------	--

Symptom	Check Point	Cause & What to Do
3-2. One channel inoperative	1) Reverse the output cords of L and R-ch from turntable	
	1-1) Inoperative channel reverses	27. Imperfect contact of the output cord
	1-2) Inoperative channel not reverses	28. Defective turntable 29. Defective IC01 (IC02) on F-1509 30. Imperfect contact of SELECTOR switch, S1

5-3. Troubleshooting on Tuner Section

1. Both FM and AM inoperative (AUDIO section operative)

1-1. Both channels inoperative	1) +12V not supplied to terminal 20, 21 on F-1509	1. Imperfect contact of SELECTOR switch, S1c 2. Defective power supply section
1-2. One channel of AM and FM inoperative		3. Defective TR09 (TR10) on F-1509

2. FM Section

2-1. FM inoperative only	1) Tune FM signal or FM broadcasting station	
	1-1) Signal meter inoperative	4. Defective FET01 on F-1506 5. Defective TR01~TR05 on F-1506 6. Defective CF01, CF02 on F-1506 7. Defective L01~L04 on F-1506 8. Defective T01 on F-1506
	1-2) Signal meter operative (Interstation noise too low compared with proper unit)	9. Defective IC01 on F-1506 10. Defective T02, T03 on F-1506 11. Defective D01, D02 on F-1606
2-2. Signal meter inoperative (FM broadcasting sound can be heard)		12. Defective TR06 on F-1506 13. Defective T04 on F-1506 14. Defective D03, D04 on F-1506
2-3. FM muting inoperative		15. Defective signal meter, M01 16. Defective TR07, TR08 on F-1506 17. Defective switch, S6
2-4. No channel separation on FM stereo broadcasting	*Confirm that SELECTOR switch is set to FM AUTO	
	1) Indicator lamp not lighted	18. Defective IC03 on F-1506 19. Defective L07 on F-1506 20. Defective LED01 on F-1506
	2) Indicator lamp lighted	21. L07, out of adjustment on F-1506 22. VR02, out of adjustment on F-1506

3. AM Section

3-1. AM inoperative	1) Interstation noise does not increase by touching the terminal 23 on F-1506	23. Defective IC02 on F-1506 24. Defective T05 on F-1506 25. Defective T06 on F-1506 26. Defective TR11 on F-1506
	2) Interstation noise increases by touching the terminal 23 on F-1506	27. Defective bar antenna 28. Variable capacitor shorted 29. Defective IC02 on F-1506 30. Defective signal meter, M01
3-2. Signal meter inoperative		

6. PARTS LOCATIONS AND PARTS LISTS

6-1. F-1506 Tuner Circuit Board (Stock No. 7520830 Complete Circuit Board F-1506)


Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR01	0305801	2SC1047B (G)	1 A	C10	{0661220 22pF		1 A
TR02	0305790, 1	2SC930 (C, D)	1 B		{0669221 22pF		
TR03	0306112, 3	2SC738 (C, D)	1 B	C11	0657223	22000pF	1 A
TR04	0306112, 3	2SC738 (C, D)	1 B	C12	0669370	10pF	1 A, B
TR05	0306112, 3	2SC738 (C, D)	1 B	C13	0669200	1pF	1 A
TR06	0306112, 3	2SC738 (C, D)	1 C	C14	0669370	10pF	1 A
TR07	0305731, 2	2SC711 (E, F)	2 C	C15	0669370	10pF	1 B
TR08	0305731, 2	2SC711 (E, F)	2 C	C16	0669370	10pF	1 B
TR09	0306090, 1	2SC1312 (F, G)	2 D	C17	0657223	22000pF	1 B
TR10	0306090, 1	2SC1312 (F, G)	2 D	C18	0657223	22000pF	1 A
TR11	0305731, 2	2SC711 (E, F)	1 C	C19	0650102	1000pF	1 B
IC01	0360120	μ PC555H	1 B, C	C20-28	0657223	1000pF	1 B, 1 C
IC02	0360150	HA1151	1, 2 B	C29, 30	0660101	100pF	1 C
IC03	0360080	HA1120	1 D	C31	0512100	10 μ F	16V E.C.
FET01	0370120, 1	3SK41 (L, K) FET	1 A	C33, 34	0660101	100pF	50V C.C.
D01	0311060	1N60P		C36-39	0657223	22000pF	50V C.C.
D02	0311060	1N60P	1 C	C40	0519103	0.47 μ F	50V E.C.
D03	0311160	1S2473D	2 C	C42	0657223	22000pF	50V C.C.
D04	0340090	DS430	2 C	C43	0601106	0.001 μ F	50V M.C.
T01	4235930	FM IF Coil	1 A, B	C44	0515109	1 μ F	50V E.C.
T02	4235750		1 C	C45	0515339	3.3 μ F	50V E.C.
T03	4235760	FM Discriminator Coil	1 C	C46	0601107	0.01 μ F	50V M.C.
T04	4235940	FM Meter Coil	1, 2 C	C47	0601477	0.047 μ F	50V M.C.
T05	4230620	AM IF Coil	1, 2 B, C	C48	0601107	0.01 μ F	50V M.C.
T06	4220550	AM OSC Coil	2 B	C49	0512101	100 μ F	16V E.C.
T07	0910180	Ceramic Filter	1, 2 B	C50	0601106	0.001 μ F	50V M.C.
L01	4200560	FM ANT Coil	1 A	C51	0657223	22000pF	50V C.C.
L02	4210300	FM RF Coil	1 A	C52	0669215	15pF	50V C.C.
L03	4010120	Peaking Coil	1 A	C53	0620361	360pF	50V P.C.
L04	4220530	FM OSC Coil	1 A, B	C54	0601107	0.01 μ F	50V M.C.
L05	4290011	Peaking Coil	2 A, B	C55	0512100	10 μ F	16V E.C.
L06	4900100	Inductor Coil	1 A	C56	0513479	4.7 μ F	25V E.C.
L07	4240720	19kHz MPX Coil		C57	0515109	1 μ F	50V E.C.
LC01	4240710	MPX Coil Block	2 D	C58	0515109	1 μ F	50V E.C.
CF01	0910150		1 B	C59	0600826	0.0082 μ F	50V M.C.
CF02	0910150	Ceramic Filter	1 B	C60	0600826	0.0082 μ F	50V M.C.
LPF01	0910220	Low Pass Filter		C61	0512101	100 μ F	16V E.C.
VC	1220170	Variable Capacitor	1, 2 B	C62	0601108	0.1 μ F	50V M.C.
TC03	1230090	Trimmer Capacitor	1 A	C63	0601108	0.1 μ F	50V M.C.
VR02	1035070	1k Ω (B) FM STEREO Separation VR	1 D	C70	0519101	1 μ F	50V E.C.
C01	0669369	8.2pF	1 A	C71	0519101	1 μ F	50V E.C.
C02	0650102	1000pF	1 A	C72	0650102	1000pF	50V C.C.
C03	0659015	2200pF	1 A	C73	0510470	47 μ F	6.3V E.C.
C04	0657223	22000pF	1 A	C74	0601477	0.047 μ F	50V M.C.
C05	0659015	2200pF	1 A	C75	0513479	4.7 μ F	25V E.C.
C06	{0669002 3.9pF		1 A	C76	0600157	0.015 μ F	50V M.C.
	{0669205 3.9pF			C77	0600157	0.015 μ F	50V M.C.
C07	0669370	10pF	1 A	C78	0513479	4.7 μ F	25V E.C.
C08	0659015	2200pF	1 A	C79	0629001	6800pF	50V P.C.
C09	0650102	1000pF	1 A	C81	0510101	100 μ F 6.3V	E.C.

Abbreviations

C.R. : Carbon Resistor	BP.E.C.: Bi-Polar Electrolytic Capacitor
S.R. : Solid Resistor	C.C. : Ceramic Capacitor
Ce.R. : Cement Resistor	M.C. : Mica Capacitor
M.R. : Metallized Film Resistor	O.C. : Oil Capacitor
M.C. : Mylar Capacitor	P.C. : Polystyrene Capacitor
E.C. : Electrolytic Capacitor	T.C. : Tantalum Capacitor

F-1506 Conductor Side

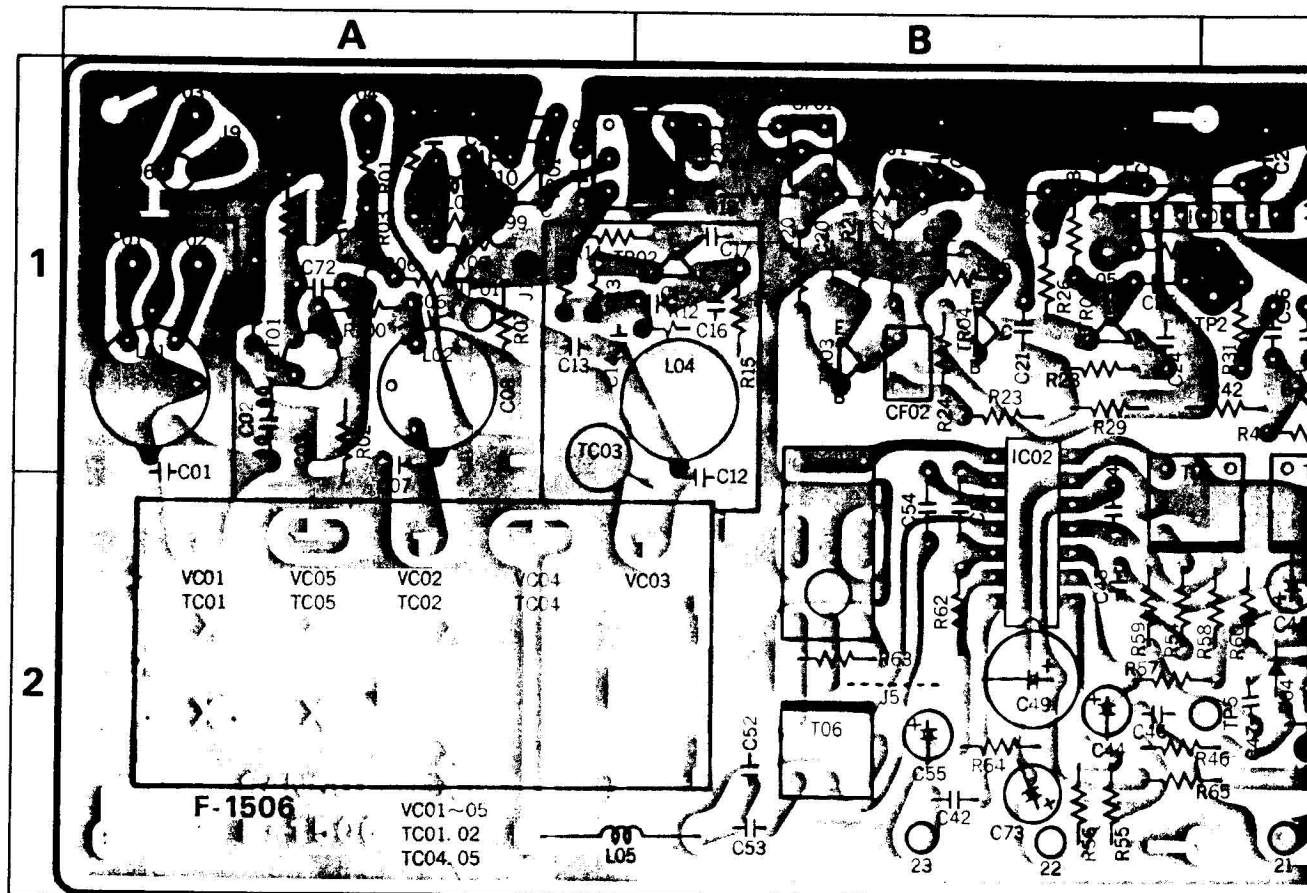

Parts List

Parts No.	Stock No.	Description	Position
R01	0113394	390k Ω	1A
R02	0113103	10k Ω	1A
R03	0113104	100k Ω	1A
R04	0113101	100 Ω (3SK41 (L))	1A
R05	0113151	150 Ω (3SK41 (K))	1A
R06	0113105	1M Ω	1A
R07	0113220	22 Ω	1A
R08	0113562	5.6k Ω	1A
R09	0113123	12k Ω	1A
R10	0113332	3.3k Ω	1A
R11	0116822	8.2k Ω	1A
R12	0116222	2.2k Ω	1B
R13	0116220	22 Ω	1A
R14	0113222	2.2k Ω	1A, B
R15	0113102	1k Ω	1B
R16	0113471	470 Ω	1B
R17	0113221	220 Ω	1B
R18	0113392	3.9k Ω	1B
R19	0113152	1.5k Ω	1B
R20	0113101	100 Ω	1B
R21	0113182	1.8k Ω	1B
R22	0113471	470 Ω	1B
R23	0113681	680 Ω	1B
R24	0113101	100 Ω	1B
R25	0113271	270 Ω	1B
R26	0113152	1.5k Ω	1B
R27	0113220	22 Ω	1B

Parts No.	Stock No.	Description	Position
R28	0113271	270 Ω	1B
R29	0113391	390 Ω	1B
R30	0113681	680 Ω	1B
R31	0113332	3.3k Ω	1C
R32	0113222	2.2k Ω	1B, C
R33	0113682	6.8k Ω	1C
R34	0113331	330 Ω	1C
R35	0113102	1k Ω	1C
R36	0113102	1k Ω	1C
R37	0113101	100 Ω	1C
R38	0113471	470 Ω	1C
R39	0113103	10k Ω	1C
R40	0113103	10k Ω	1C
R42	0113103	10k Ω	1C
R43	0113183	18k Ω	1C
R44	0113102	1k Ω	1C
R45	0113101	100 Ω	1, 2C
R46	0113182	1.8k Ω	2B, C
R47	0113682	6.8k Ω	2C
R48	0113104	100k Ω	2C
R49	0113104	100k Ω	2C
R51	0113220	22 Ω	2C
R53	0113471	470 Ω	1C
R54	0113101	100 Ω	2B
R55	0113122	1.2k Ω	2B
R56	0113152	1.5k Ω	2B
R57	0113103	10k Ω	2B, C

12

6-2. F-1509 Pre. Main Amp & Power Supply Circuit Board

(Stock No. 7592090 Complete Circuit Board F-1509)

Parts List



Parts No.	Stock No.	Description	Position
TR01, 02	0306091	2SC1312 (G)	2 B, 3 B
TR03, 04	0305731, 2	2SC711 (E, F)	2 B, 3 B
TR05, 06	0305880	2SC1000	2 A
TR07, 08	0300310, 1	2SA697 (C, D)	2 A
TR09, 10	0306221, 2	2SC1166 (O, Y)	2 A
TR11, 12	0300641, 2	2SA661 (O, Y)	1 A, 3 A
TR13, 14	0308331, 2	2SD315 (D, E)	1, 2A, 2, 3A
TR15, 16	0308331, 2	2SD315 (D, E)	1 A, 3 A
TR17	0308362, 3	2SD330 (D, E)	3, 4 A
TR18	0306131, 2	2SC1364 (6, 7)	3, 4 B
TR19	0306131, 2	2SC1364 (6, 7)	3 B
IC01, 02	0360180	BA-311 IC	4 A
D01, 02	0340110	SV-03F	1, 2A, 2, 3A
D03, 04	0310340	10D-1	1 A, 3 A
D05	0316320	BD-13E-C	4 B
D06	0310680	10DC-1	1 A
VR01, 02	1011020	250K Ω (B) $\times$ 2	2, 3 B
VR03, 04	1011030, 1	100K Ω (A) $\times$ 2	1, 2 B
VR05, 06	1011030, 1	100K Ω (A) $\times$ 2	1 B
VR07, 08	1011040, 1	250K Ω (MN) $\times$ 2	2 B
VR09, 10	1035040	330 Ω (B) Semi-Variable Resistor	2 A
C01, 02	0519105	2.2 μ F 50V E.C.	4 A
C03, 04	0660101	100pF 50V C.C.	4 A
C05, 06	0511330	33 μ F 10V E.C.	4 A
C07, 08	0515109	1 μ F 50V E.C.	4 A
C09, 10	0600566	0.0056 μ F 50V M.C.	4 A
C11, 12	0600227	0.022 μ F 50V M.C.	4 A
C13, 14	0610471	470pF 50V P.C.	3 B
C15, 16	0600227	0.022 μ F 50V M.C.	3 B
C17, 18	0519101	1 μ F 50V E.C.	2, 3 B, 3 B
C19, 20	0660220	22pF 50V C.C.	2 B, 3 B
C21, 22	0515109	1 μ F 50V E.C.	2 B, 2, 3 B
C23, 24	0600126	0.0012 μ F 50V M.C.	2 B
C25, 26	0600107	0.01 μ F 50V M.C.	1 B
C27, 28	0600127	0.012 μ F 50V M.C.	1 B
C29, 30	0600108	0.1 μ F 50V M.C.	1 B
C31, 32	0519101	1 μ F 50V E.C.	2 B
C33, 34	0515100	10 μ F 50V E.C.	2 A, B
C35, 36	0660151	150pF 50V C.C.	2 B
C37, 38	0515101	100 μ F 50V C.C.	1, 2A, 3A, B
C39, 40	0660121	100pF 50V C.C.	2 A, 3 A
C41, 42	0601477	0.047 μ F 50V M.C.	1 A, 3 A
C43, 44	0514102	1.000 μ F 35V E.C.	1A, B, 3A, B
C45	0515100	10 μ F 50V E.C.	4 A
C46	0515101	100 μ F 50V E.C.	3 B
C47	0514221	220 μ F 35V E.C.	3 B
C48	0512221	220 μ F 16V E.C.	3 B
C49	0657223	0.022 μ F 50V C.C.	3, 4 A
C50	0515221	220 μ F 50V E.C.	4 A, B
C53	0546479	4.7 μ F 63V E.C.	1 A
C61	0512101	100 μ F 16V E.C.	4 B
C703	0559504	2200 μ F 63V E.C.	
R01, 02	0107222	2.2K Ω	4 A
R03, 04	0107104	100K Ω	$\frac{1}{4}$ W C.R. 4 A, 4 B
R05, 06	0107104	100K Ω	4 A

Parts No.	Stock No.	Description	Position
R07, 08	0107474	470K Ω	4 A
R09, 10	0107123	12K Ω	4 A
R11, 12	0107124	120K Ω	4 A
R13, 14	0107104	100K Ω	4 A
R15, 16	0107123	12K Ω	4 B, 3 B
R17, 18	0107223	22K Ω	3 B
R19, 20	0107222	22K Ω	2 B, 3 B
R21, 22	0107224	220K Ω	2 B, 3 B
R23, 24	0107332	3.3K Ω	2 B, 3 B
R25, 26	0107822	8.2K Ω	2 B, 3 B
R27, 28	0107274	270K Ω	2 B, 3 B
R29, 30	0107561	560 Ω	2 B, 3 B
R31, 32	0107181	180K Ω	2 B, 3 B
R33, 34	0107683	68K Ω	2 B, 3 B
R35, 36	0107822	8.2K Ω	2 B
R37, 38	0107183	18K Ω	$\frac{1}{4}$ W C.R. 1 B
R41, 42	0107272	2.7K Ω	1 B
R43, 44	0107822	8.2K Ω	1 B
R45, 46	0107222	2.2K Ω	2 B
R47, 48	0107683	68K Ω	2 A
R49, 50	0107333	33K Ω	2 A
R51, 52	0107104	100K Ω	1, 2A, 3A
R53, 54	0107122	1.2K Ω	2 A
R55, 56	0107121	120 Ω	1, 2A, 3A
R57, 58	0107472	4.7K Ω	1, 2A, 3A
R59, 60	0107330	33 Ω	2 A
R61, 62	0107272	2.7K Ω	1 A, 3 A
R63, 64	0107102	1K Ω	1 A, 3 A
R65, 66	0107689	6.8 Ω	2 A
R67, 68	0107479	4.7 Ω	2 A
R69, 70	0107221	220 Ω	1, 2A, 3A
R71, 72	0132478	0.47 Ω	1, 2A, 2, 3A
R73, 74	0132478	0.47 Ω	1 A, 3 A
R75, 76	0107479	4.7 Ω	1 A, 3 A
R77, 78	0107221	220 Ω	$\frac{1}{4}$ W C.R. 1 A, 3 A
R79, 80	0171100	10 Ω 1 W M.R.	1 A, 3 A
R81, 82	0103471	470 Ω $\frac{1}{2}$ W C.R.	1 B, 3 B
R83	0107102	1K Ω	4 B
R84	0107121	120 Ω	3 B
R85	0107100	10 Ω	$\frac{1}{4}$ W C.R. 4 B
R86	0107102	1K Ω	3, 4 A B
R87	0103821	820 Ω $\frac{1}{2}$ W C.R.	3 A
R88	0183331	330 Ω 3 W Ce.R.	3 A
R89	0107182	1.8K Ω	$\frac{1}{4}$ W C.R. 3, 4 A B
R90	0107182	1.8K Ω	3, 4 A B
F01, 02	0433670	2.5A 150V Quick Acting Fuse	2 A
PL701-704	0420040	300mA 7V Fuse Type Lamp	
S1	1101570	F-1-3-4, Rotary Switch	4 B


Abbreviations

C.R.	: Carbon Resistor	BP.E.C.	: Bi-Polar Electrolytic Capacitor
S.R.	: Solid Resistor	C.C.	: Ceramic Capacitor
Ce.R.	: Cement Resistor	MI.C.	: Mica Capacitor
M.R.	: Metallized Film Resistor	O.C.	: Oil Capacitor
M.C.	: Mylar Capacitor	P.C.	: Polystyrene Capacitor
E.C.	: Electrolytic Capacitor	T.C.	: Tantalum Capacitor

Conductor Side

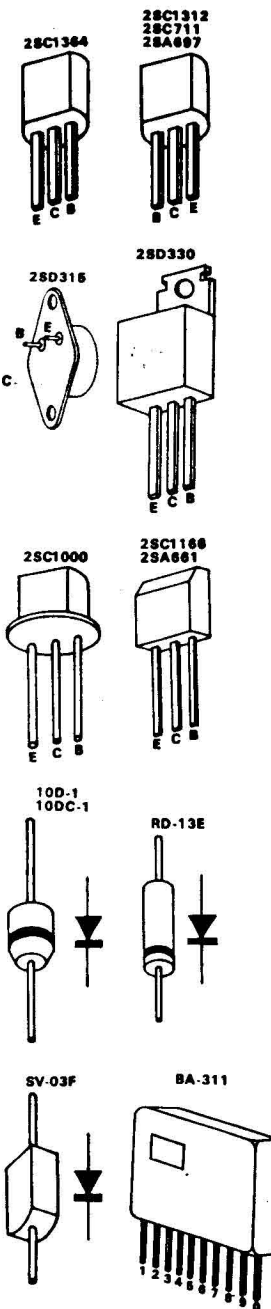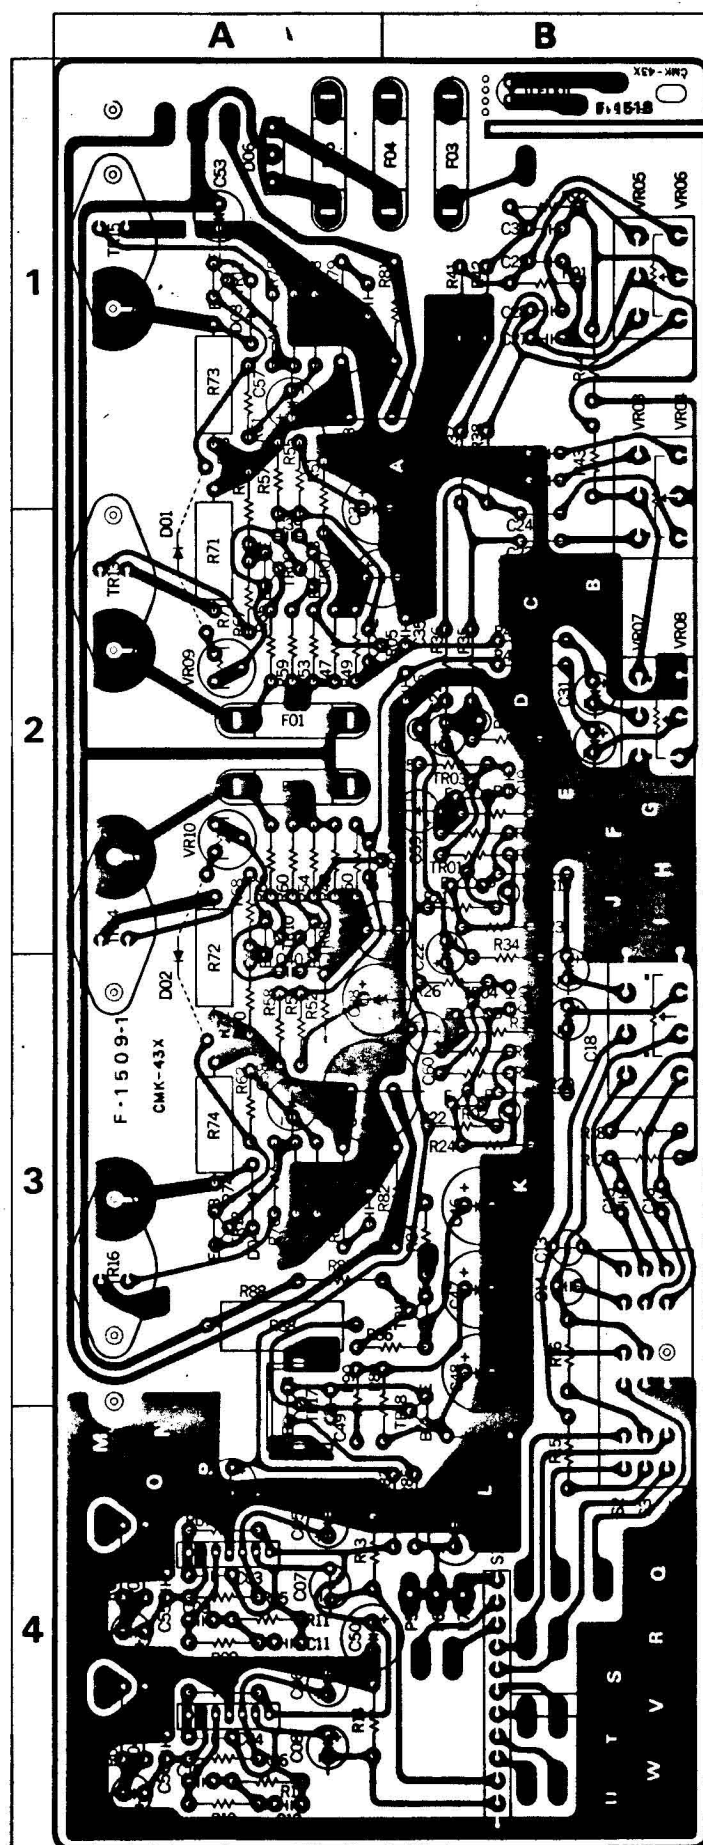

6-3. Other Parts (Top Side)

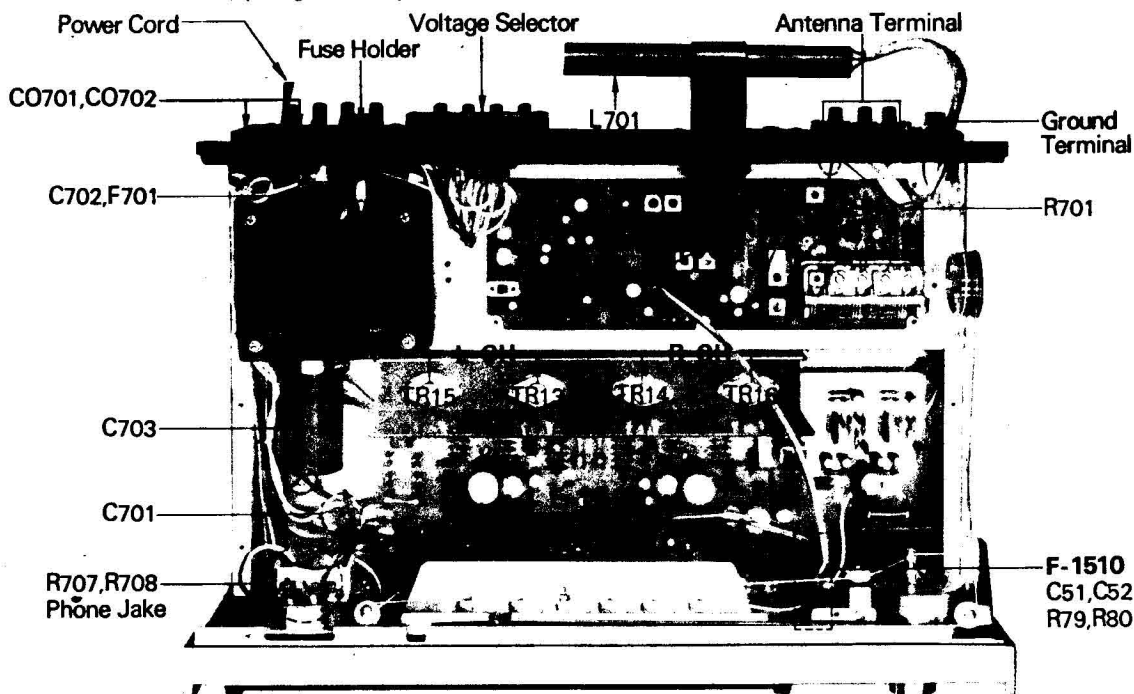


Parts List on Top Side

Parts No.	Stock No.	Description
	F-1510	Switch Circuit Board Ass'y
C51	0610391	390pF } 50V P.C.
C52	0610391	390pF }
R79	0107221	220Ω } 1/4W C.R.
R80	0107221	220Ω }
TR13	0308331, 2	2SD315 (E, D) } Transistor
TR14	0308331, 2	2SD315 (E, D) }
TR15	0308331, 2	2SD315 (E, D) }
TR16	0308331, 2	2SD315 (E, D) }
C701	0659801	0.01μF } 1.4KV C.C.
C702	0659802	0.0047μF }
C703	0559504	2200μF 63V E.C.
R701	0113122	1.2KΩ 1/4W S.R.
R707	0103331	330Ω 1/2W C.R.

Parts No.	StockNo	Description
R708	0103331	330Ω 1/2W C.R.
L701	4200650	Bar Antenna (ARS-29)
F701	{ 2300060 0431232 0431240	Fuse Holder 1.5A (220~240V) 2A (100~117V)
C0701	2450050	AC Outlet
C0702	2450050	AC Outlet
PT01	4002090	Power Transformer
	2210190	Antenna Terminal
	2230050	Ground Terminal
	2430200	Phone Jack
	3800020	Power Cord
	2410090	Voltage Selector, Plug
	2410080	Voltage Selector, Socket

6-4. Other Parts (Bottom Side)


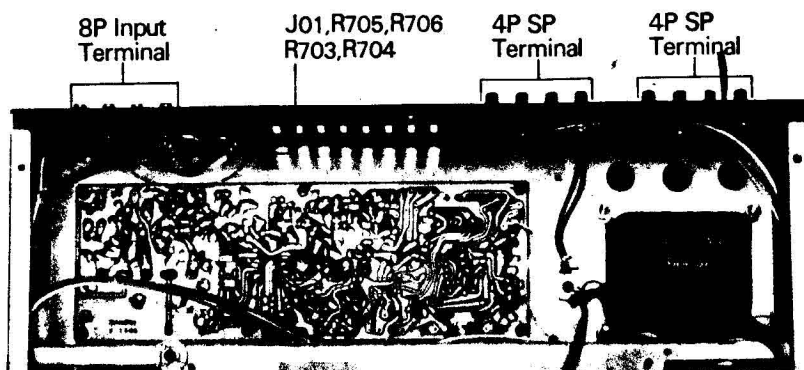


6-5. Other Parts (Front Side)

Parts No.	Stock No.	Description
1	5101161	Binding Head Screw, M4×6
2	5006320	Bonnet
3	5102843	Flat Countersunk Head Screw, M3×6
4	5176052	Nut, headphone jack
5	5317730	M-3 Type Knob, POWER, SPEAKER and SELECTOR
6	5317740	S-3 Type Knob, tone control
7	5317720	L-1 Type Knob, VOLUME
8	5326430	Push Button
9	5326420	Button, LOUDNESS, MONO and TAPE MONITOR
10	5317820	T-6 Type Knob, TUNING
11	5110781	Hex. Nut, M9
12	5120184	Plain Washer, 9φ
13	7006970	Front Panel
14	5047760	Smoked Plate
15	2430200	Headphone Jack
16	1101581	Rotary Switch Y-1-2-5, POWER and SPEAKER
17	1011030	100kΩ(A)×2 BASS and TREBLE volume
18	1011040	250kΩ(B)×2 (MN) BALANCE volume
19	1130870	Push Switch
20	1101570	Rotary Switch F-1-3-4, SELECTOR
21	5236490	Spacer Nut, M9
22	1130880	Push Switch
23	7036400	Tuning Ass'y
24	5416361	Dial Pointer Ass'y
25	5407690	Dial Scale
26	5109122	Binding Head Screw, M3×8
27	2591920	LED Circuit Board F-1-518
28	0319010	LED (FM Stereo Indicator)
29	5110241	Hex. Nut, M3
30	5120141	Plain Washer, 3φ
31	0420040	Fuse Type Lamp (7V, 300mA)
32	5058150	Indicator Box

Parts No.	Stock No.	Description
32	5109122	Binding Head Tapping Screw, M3×8
33	5269700	Meter Holder
34	0420040	Fuse Type Lamp (7V, 300mA)
35	7726060	Meter Lamp Unit B
	4300610, 1	Signal Meter

Parts No.	Stock No.	Description
36	5109222	Binding Head Tapping Screw, M3×8
37	5101164	Binding Head Screw, M4×12
38	5516911	Foot
39	5058200	Bottom Plate

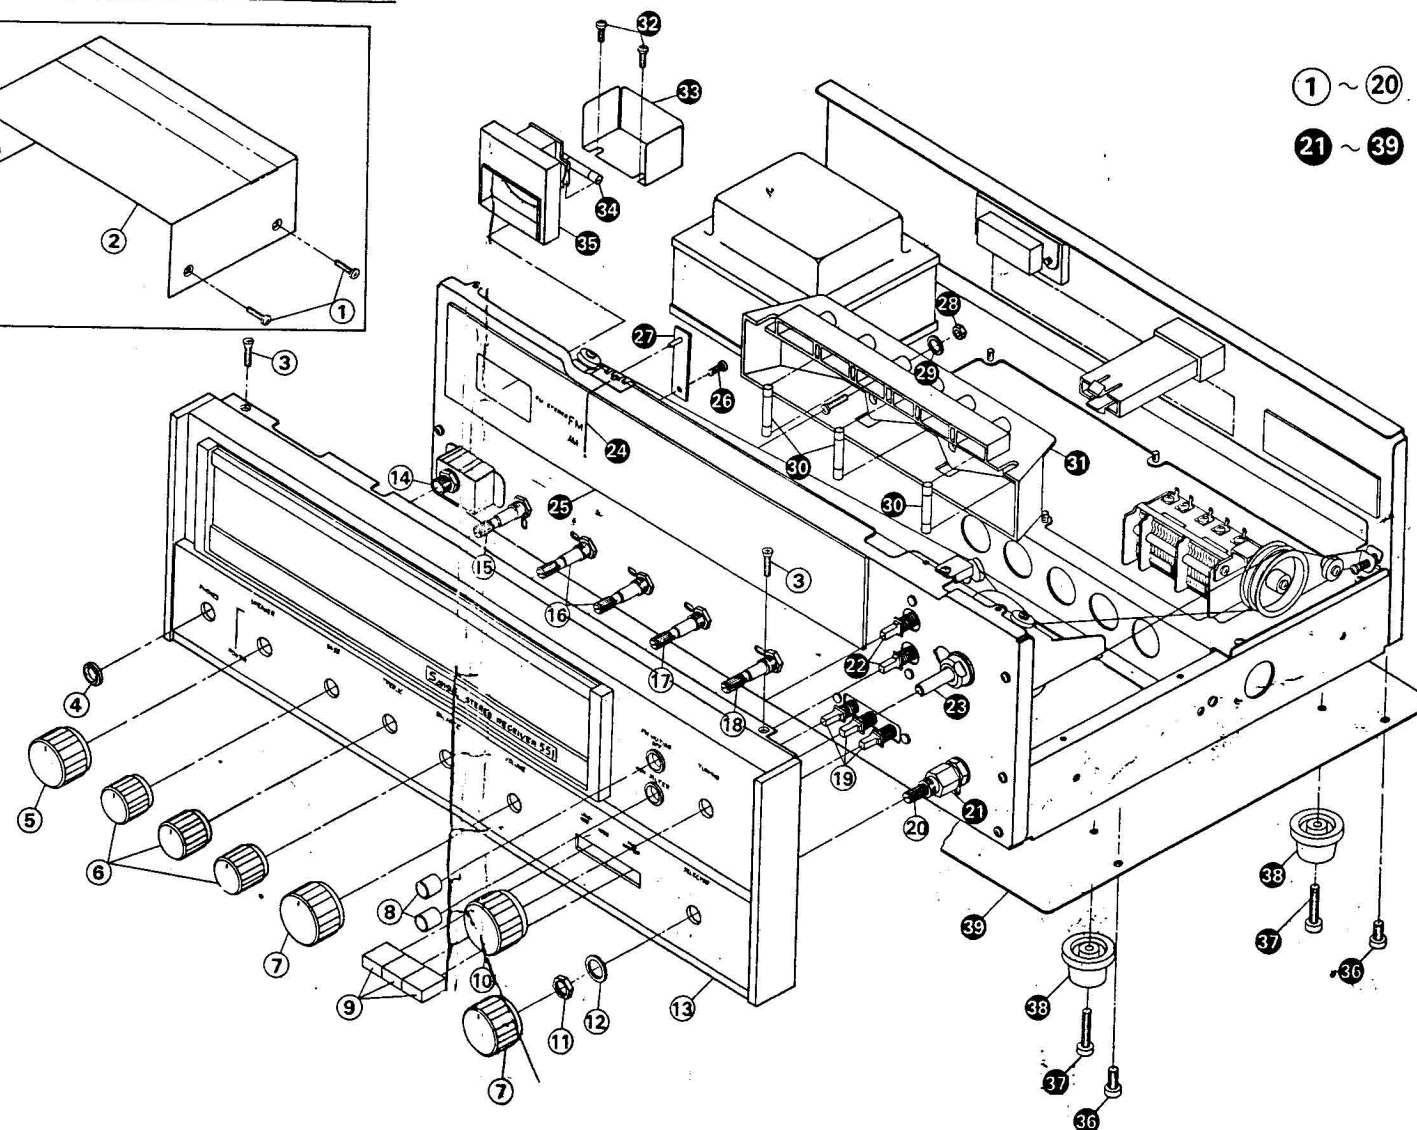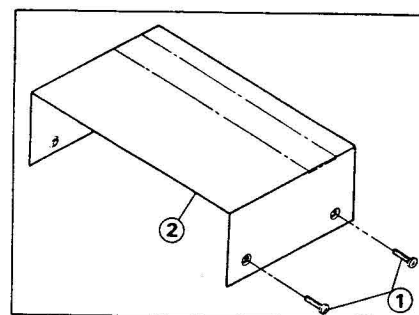

Parts List on Bottom Side

Parts No.	Stock No.	Description
R703	0107394	390KΩ
R704	0107394	390KΩ
R705	0107104	100KΩ
R706	0107104	100KΩ
		1/4W C.R.
J01	2430040	DIN Connector
	2210200	4P Speaker Terminal
	2200340	8P Input Terminal

